







On version 1E and 1E.1 software cab radios (NR2.6 and NR2.8), the above head codes will need to be entered into the cab radio as a 5-digit numeric train running number as follows:

1100	55192	1150	45696
1101	80199	1151	70703
1102	15217	1152	05721
1103	40224	1153	30728
1104	65231	1154	55735
1105	00249	1155	80742
1106	25256	1156	15760
1107	50263	1157	40767
1108	75270	1158	65774
1109	10288	1159	00792
1110	35295	1160	25799
1111	60302	1161	50806
1112	85309	1162	75813
1112	20327	1163	10831
1113	45334	1164	35838
1114	70341	1165	60845
	05359	1166	85852
1116			
1117	30366	1167	20870
1118	55373	1168	45877
1119	80380	1169	70884
1120	15398	1170	05902
1121	40405	1171	30909
1122	65412	1172	55916
1123	00430	1173	80923
1124	25437	1174	15941
1125	50444	1175	40948
1126	75451	1176	65955
1127	10469	1177	00973
1128	35476	1178	25980
1129	60483	1179	50987
1130	85490	1180	75994
1 31	20508	1181	11012
1132	45515	1182	36019
1133	70522	1183	61026
1134	05540	1184	86033
1135	30547	1185	21051
1136	55554	1186	46058
1 37	80561	1187	71065
1138	15579	1188	06083
1139	40586	1189	31090
1140	65593	1190	56097
1 41	00611	1191	81104
1142	25618	1192	16122
1143	50625	1193	41129
1144	75632	1194	66136
1 45	10650	1195	01154
1146	35657	1196	26161
1147	60664	1197	51168
1148	85671	1198	76175
1149	20689	1199	11193
1143	20003	100	11135





